


Avoid continuous joist through rooms  
Stager or cut

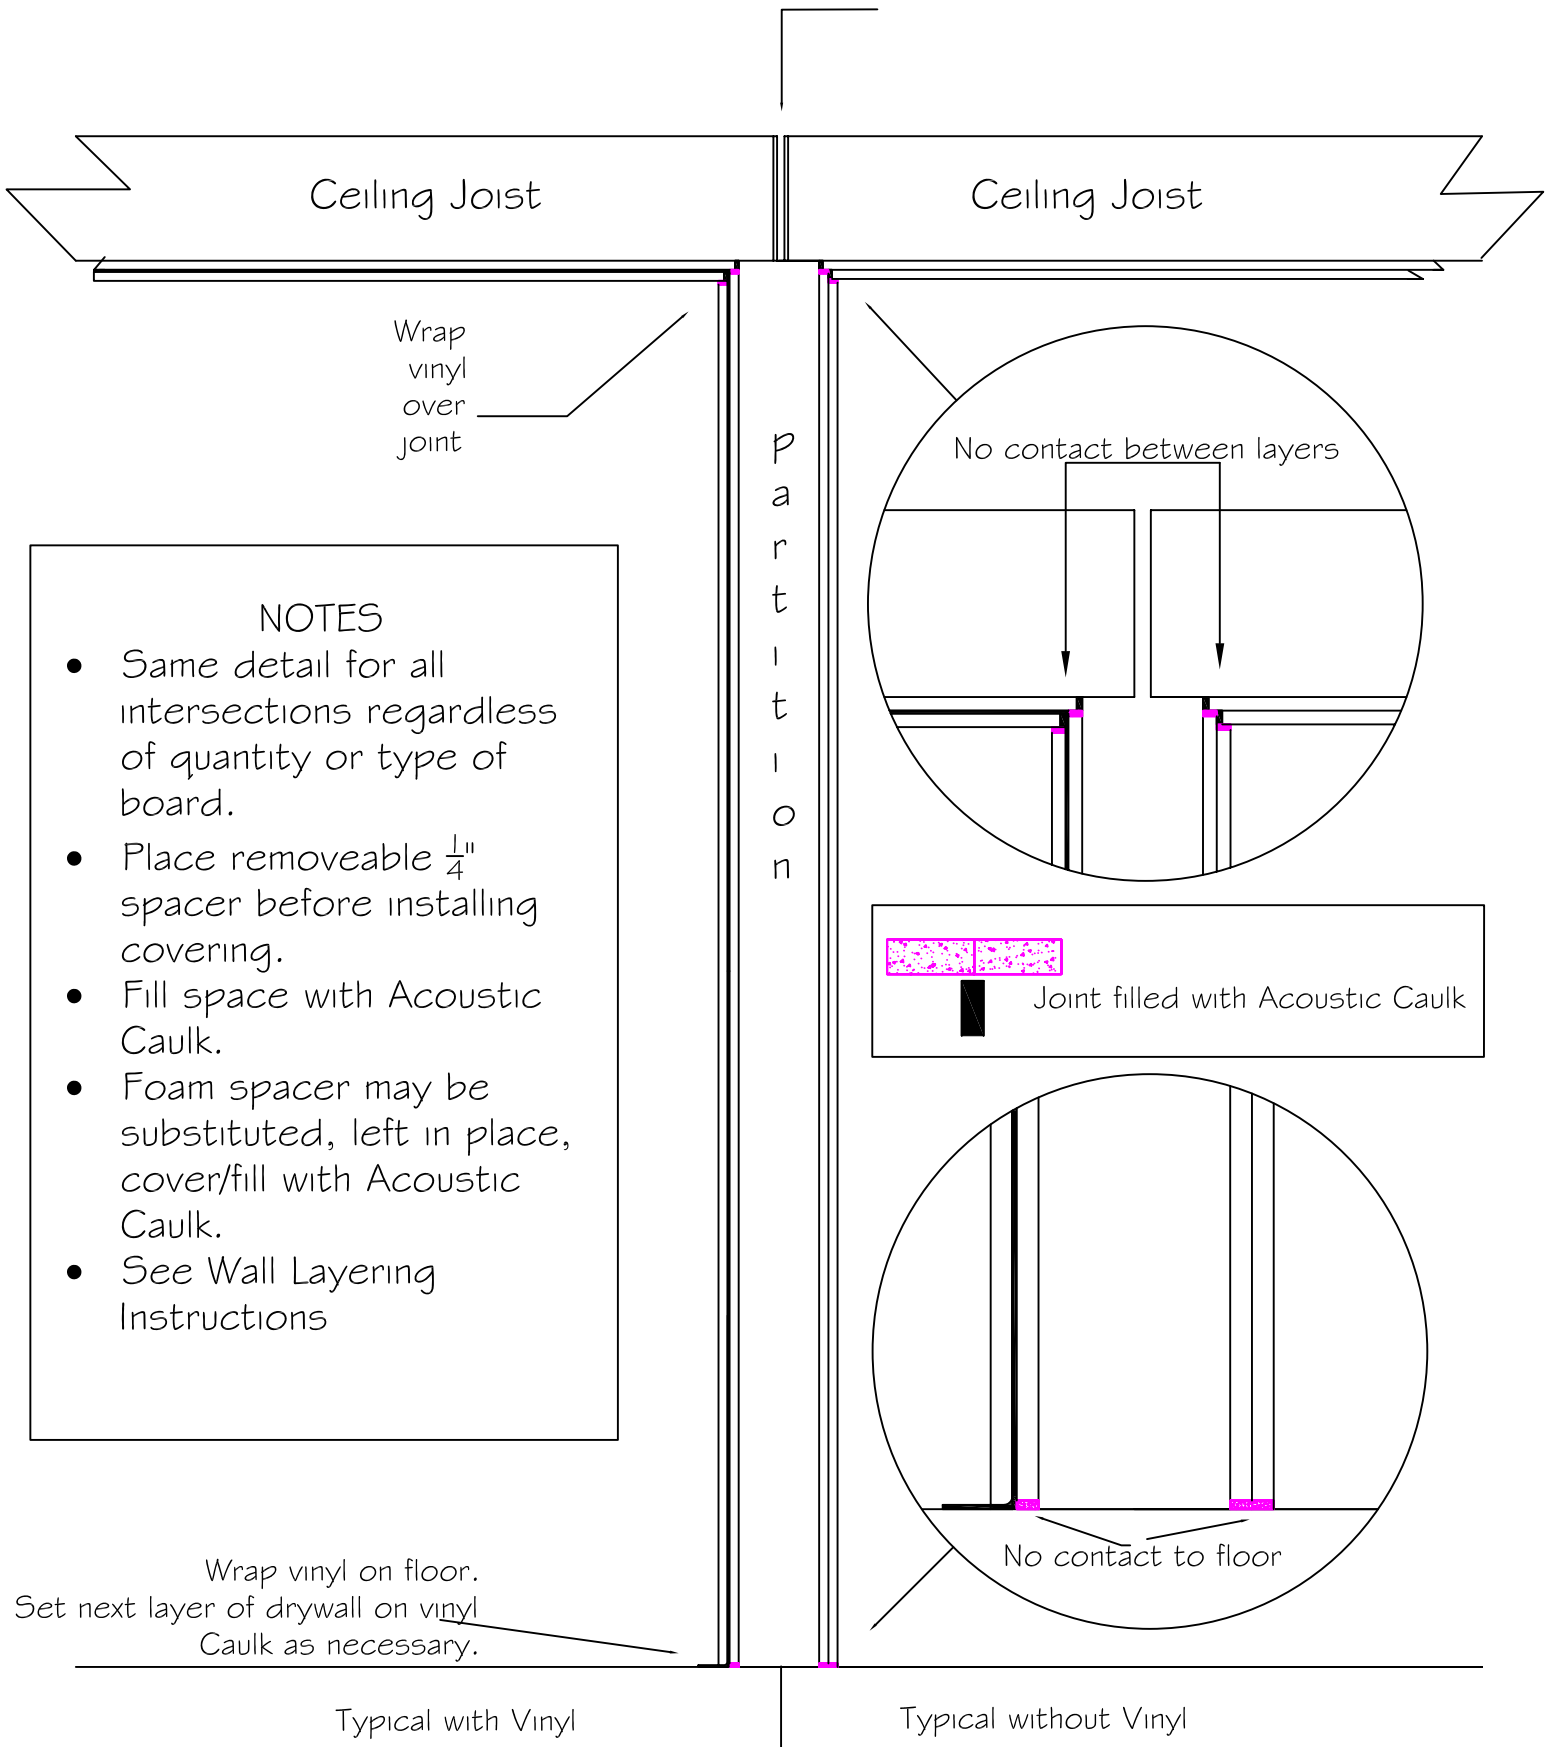

- NOTES
- Same detail for all intersections regardless of quantity or type of board.
  - Place removeable  $\frac{1}{4}$ " spacer before installing covering.
  - Fill space with Acoustic Caulk.
  - Foam spacer may be substituted, left in place, cover/fill with Acoustic Caulk.
  - See Wall Layering Instructions

# Detail Drywall Intersections

no scale